


## 4-In-1 Alphabet Train

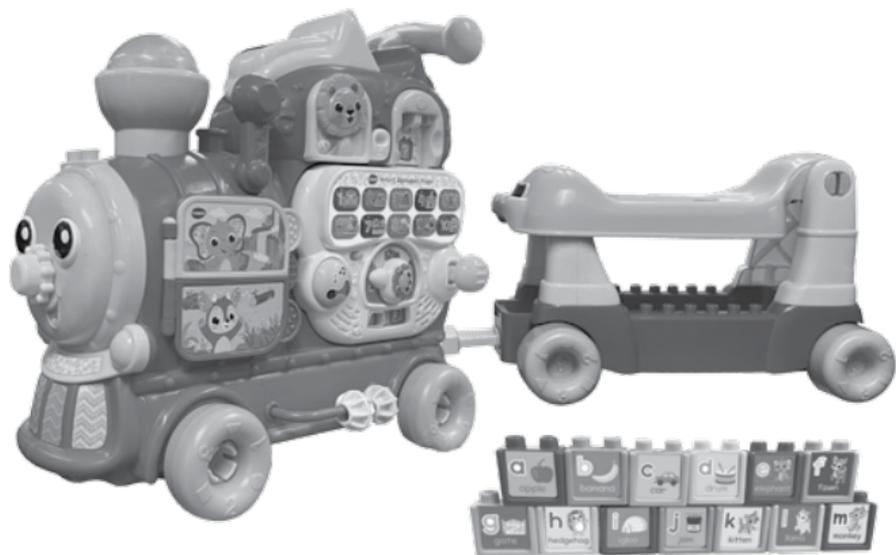

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

*4-10 years*




To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Are you ready to get rolling? Let's chug along into learning fun with the **4-In-1 Alphabet Train by VTech®!**

This alphabet train is great for sit-down play, as well as being a walker, pull-along wagon and ride on. Train includes 13 double-sided letter blocks and a magic tunnel to load the blocks into the wagon. You can also stack the blocks on the inside of the wagon and slide the blocks down! Also features a removable activity panel, number pad, light up piano keys, turning book and manipulative gears.

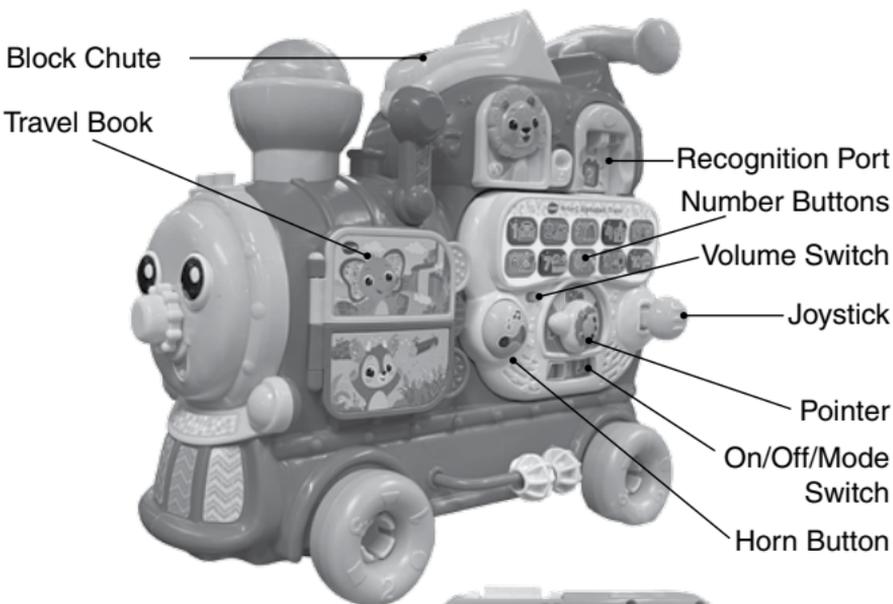

Learning Blocks




# INCLUDED IN THE PACKAGE


- 4-In-1 Alphabet Train



Train Engine

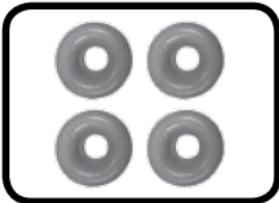

4 Engine Wheels

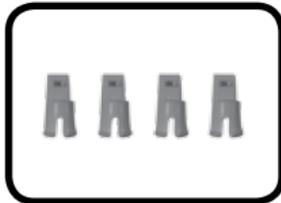

4 Engine Wheel  
Axle Covers



Handle



Bead Rail



Joystick



Hinge



Pull Cart  
Front Support




2 Pull Cart  
Back Supports



Pull Cart Seat



Pull Cart Base

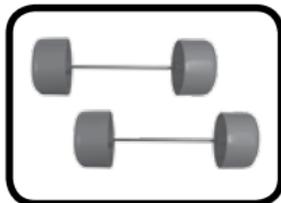

2 Sets of Pull Cart  
Wheels with Axles



Electronic  
Activity Panel



13 Double-Sided  
Learning Blocks



2 Label Sheets

- Parent's Guide

### **WARNING**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

### **NOTE**

Please keep this Parent's Guide as it contains important information.

### **NOTE**


Please cut and discard the cord before playing with the unit. The cord is not part of the product and should be discarded for your child's safety.



# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Find the battery cover on the back of the electronic activity panel. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

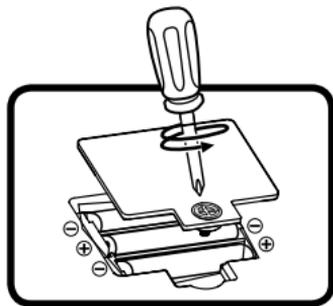

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

### IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:







Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

# LABEL APPLICATION



Please securely stick the labels to the train engine as indicated below:

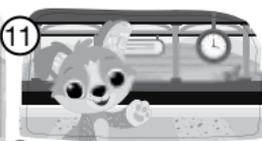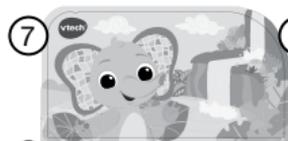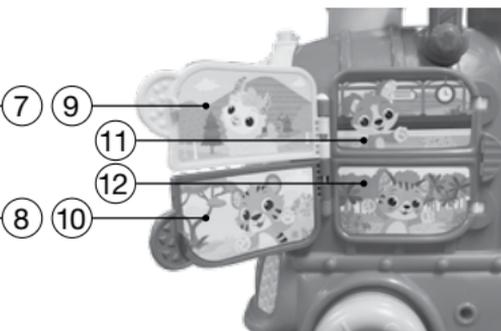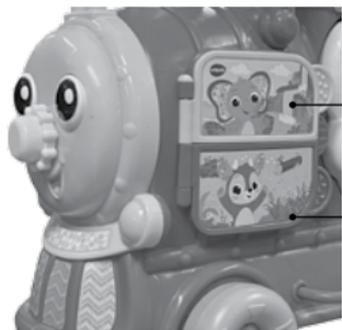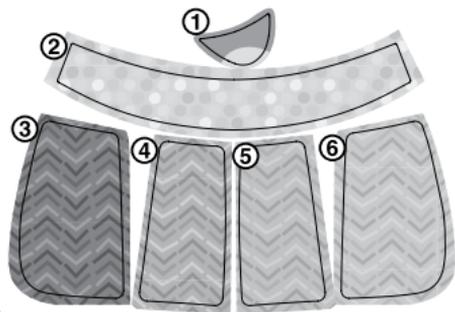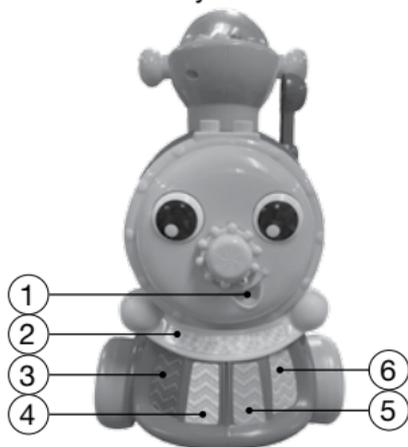


# ASSEMBLY INSTRUCTIONS

With the **4-In-1 Alphabet Train**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Insert the Joystick into the Electronic Activity Panel. Push down on the Joystick until you hear it click into place. Once you have installed the Joystick, it cannot be removed.
2. Insert the Bead Rail into the side of the Train Engine. Press down on the Bead Rail until you hear it click into place. Once you have installed the Bead Rail, it cannot be removed.
3. Position the Handle with the curved part of the handle facing the back of the Train Engine. Insert the Handle into the slot on the top of the Train Engine. Push down on the Handle until you hear it click into place. Once you have installed the Handle, it cannot be removed.
4. Insert the Axles into the Engine Wheels and then insert the Axles into the sockets on the body of the Train Engine. Push down on the Engine Wheels until you hear the wheels click into place. Once you have installed the Engine Wheels, they cannot be removed.

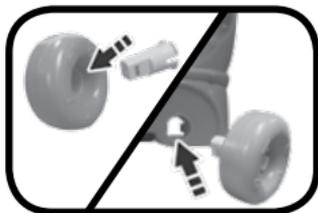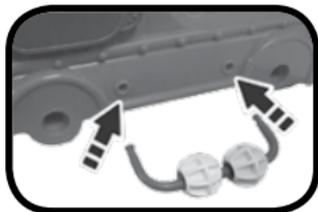


5. Position the Hinge so that the large hole is facing up. Insert the Hinge into the hole on the front of the Pull Cart until you hear it click into place. Once you have attached the Hinge to the Pull Cart, it cannot be removed.

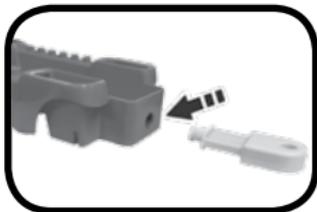


6. Insert the Pull Cart Wheels with Axles into the bottom of the Pull Cart until you hear them click into place. Once you have installed the Pull Cart Wheels, they cannot be removed.

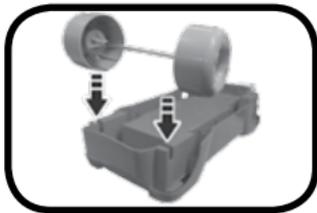


7. Attach the Pull Cart Back Support Pieces to the sides of the Pull Cart Seat. Insert the Pull Cart Back Support Pieces and the Pull Cart Front Support into the base of the Pull Cart until you hear them click into place. Once you have assembled the Pull Cart, it cannot be taken apart.

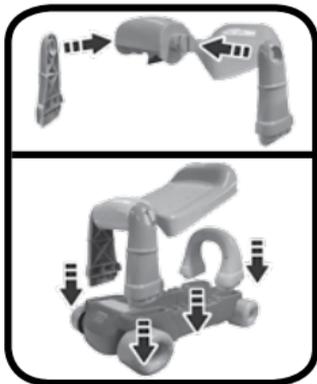


8. To attach the Pull Cart to the Train Engine, insert the Hinge into the slot on the back of the Train Engine. You will hear the Hinge click into position to indicate the Pull Cart is attached correctly.

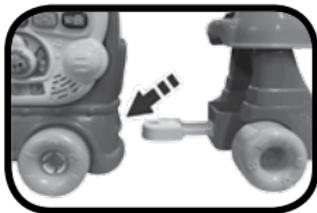

9. To detach the Pull Cart from the Train Engine, press and hold the circle button under the bottom of the Train Engine, then pull the Hinge out of the slot.

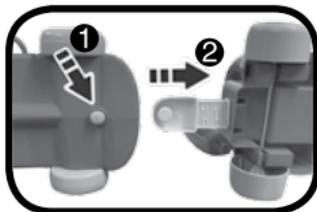

10. To attach the Electronic Activity Panel to the top of the Train Engine, insert the Electronic Activity Panel onto the post on the top of the Train Engine. To remove the Electronic Activity Panel, slide the two Electronic Activity Panel Release Tabs on the back of the Electronic Activity Panel inward to release the Electronic Activity Panel.

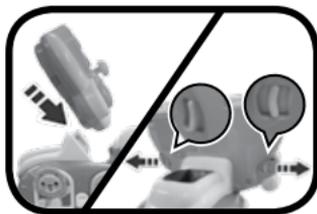

11. To attach the Electronic Activity Panel on the side of the Train Engine, insert the Electronic Activity Panel into the slot while sliding the tab up. To remove the Electronic Activity Panel, slide the tab up and pull gently on the Electronic Activity Panel.



**WARNING:**

Not to be used by children over 36 months. Insufficient strength. 20kg (3 stone) Max. Regularly check for signs of wear or tear on the snap in or locking devices. If damaged do not use until repaired or replaced. Only to be used under the direct supervision of a competent adult.

# PRODUCT FEATURES

## 1. On/Off/Mode Switch

To turn the unit **On**, slide the **On/Off/Mode Switch** to Travel mode  or Learning mode . You will hear a song, a phrase and fun sounds. To turn the unit **Off**, slide the **On/Off/Mode Switch** to the **Off**  position.



## 2. Volume Switch

Slide the **Volume Switch** to the Low volume  or the High volume  position.



## 3. Automatic Shut-Off

To preserve battery life, the **4-In-1 Alphabet Train** will automatically shut off after approximately 45 seconds without input. The unit can be turned on again by pressing any button, inserting a **Letter Block**, turning the **Pointer** or by moving the **Joystick**.


### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES

## 1. Electronic Panel

Attach the **Electronic Activity Panel** to the side or top of the train engine to hear a fun sound and a phrase. The lights will flash with sounds.

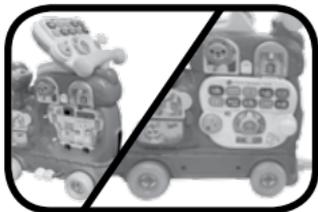

## 2. Number Buttons

Press the **Number Buttons** to learn about numbers, colours, locations and hear playful melodies in Learning mode. Pretend to travel to different locations and learn about a variety of different places and objects in Travel mode. The lights will flash with sounds.



## 3. Pointer

Turn the **Pointer** on the dial to hear a variety of playful train phrases in both modes. The lights will flash with sounds.




## 4. Horn Button

Press the **Horn Button** to hear a fun train whistle in Learning mode, and hear fun sounds, phrases and playful melodies in Travel mode. The lights will flash with the sounds.



## 5. Joystick

Push or pull the **Joystick** to learn about opposites. The lights will flash with the sounds.

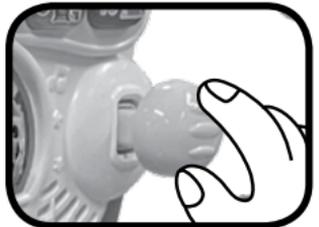


## 6. Letter Blocks

When the **Electronic Activity Panel** is attached to the side of the train, insert the **Letter Blocks** into the **Recognition Port** to learn about letters, objects and animals in Learning mode, and learn about objects and hear fun sounds and short tunes in Travel mode. The lights will flash with the sounds.




## 7. Travel Book

When the **Electronic Activity Panel** is attached to the side of the train engine, open and close the **Travel Book** pages to hear fun phrases, songs and melodies in Learning mode, and hear fun phrases in Travel mode. The lights will flash with the sounds.

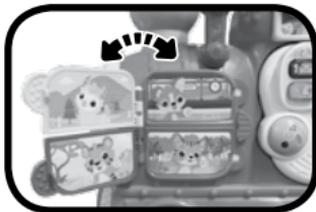

## 8. Block Chute

When the **Electronic Activity Panel** is attached to the side of the train engine, drop the blocks down the **Block Chute** to hear the blocks counted in Learning mode, and hear fun sounds in Travel mode. The lights will flash with the sounds.

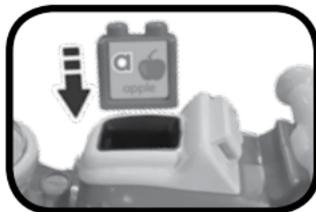

## NOTE


The infrared light sensor in the block chute is sensitive to sunlight. The sensor may not perform properly in brightly lit, sunny rooms or under direct sunlight.

## WARNING:

Do not put hands, arms and feet inside either of the **Block Chute** openings. Adult supervision is recommended.

## 9. Motion Sensor

Push the train engine to activate the **Motion Sensor** to play fun sounds, phrases and songs when the **Electronic Activity Panel** is attached to the side of the train engine. You will hear fun sounds when the panel is detached or attached on the top of the train engine. The lights will flash with the sounds.

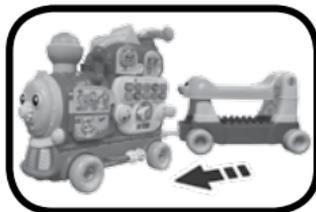

## **WARNING!**

This toy should be used in a safe area e.g. indoors, in a private garden, on level flat surfaces and away from any hazards such as cars, stairs, water etc.

Not for use on pavements or in traffic.

Adult supervision is advised.

Please help your child to sit properly on the seat and to use the toy correctly.

This toy should be used with caution to avoid falls or collisions that could cause injury to the user or third parties.

# MELODIES

1. Alphabet Song
2. A-Tisket, A-Tasket
3. Bingo
4. Entertainer
5. Girls and Boys Come Out to Play
6. Old MacDonald
7. On Top of Old Smokey
8. Toyland
9. Bear Went Over the Mountain
10. Diddle, Diddle Dumpling
11. Aiken Drum
12. The Green Grass Grew All Around

## SONG LYRICS

### Song 1

Did you ever see a lion, a lion, a lion,  
Did you ever see a lion riding on a train?

### Song 2

Here we go chugging down the tracks,  
Down the tracks,  
Down the tracks.

### Song 3

Chugga-chugga, chugga-chugga,  
Off we go!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

