

vtech[®]

Instruction Manual

SWITCH & GO DINOS

BURST THE T-REX



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Time for some roaring fun with **Switch & Go Dinos® Burst the T-Rex**. With one button press, you can auto switch this rugged off-road vehicle into a tough T-Rex. Press the Voice Button to hear fun phrases and cool sound effects.



Off / Low Volume /
High Volume Switch

INCLUDED IN THE PACKAGE

- One **Switch & Go Dinos[®] Burst the T-Rex**
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE:

Please save this Instruction Manual as it contains important information.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. If a depleted battery is present, remove it by pulling up on one end of the battery.
4. Install 1 new AAA (LR03/AM-4) battery following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

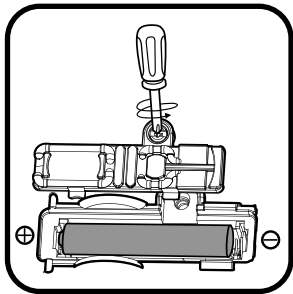

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product




The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly. In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:




www.vtech.co.uk/recycle

 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES


1. OFF / LOW VOLUME / HIGH VOLUME SWITCH

To turn the unit **On** or to adjust the volume, slide the switch to the Low  or High  Volume position. To turn the unit **Off**, slide the switch to the Off  position.

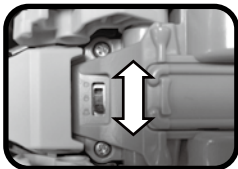


2. VOICE BUTTON

 Press the **Voice Button** to hear fun phrases and cool dinosaur sounds in Dino mode. In Vehicle mode, press the **Voice Button** to hear fun phrases and great vehicle sounds.

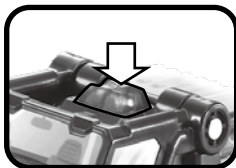

3. AUTO SWITCH BUTTON

 In Vehicle mode, push the **Auto Switch Button** to trigger automatic switching from Vehicle mode to Dino mode.

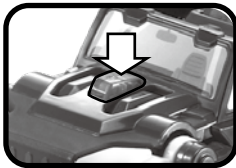

4. LED LIGHTS

 
The **LED Lights** will flash along with the sounds in Dino mode and Vehicle mode.

5. AUTOMATIC SHUT-OFF


To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. **Burst the T-Rex** can be woken up again by pressing the **Voice Button**.

Note: If the unit powers down or if the light flashes 3 times without sounds during play, please install a new battery.


SWITCHING FROM DINO TO VEHICLE

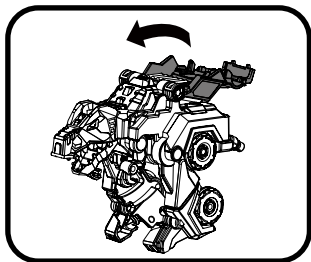

 
1. In Dino mode, flip the tail up towards the head.

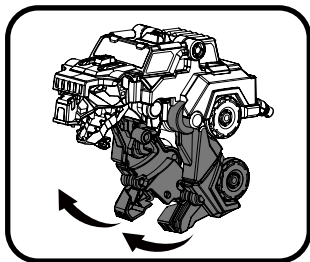

 2. Flip the feet up.

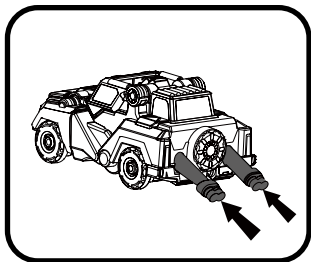


 3. Simultaneously push both exhaust pipes firmly into the body until you hear a click.

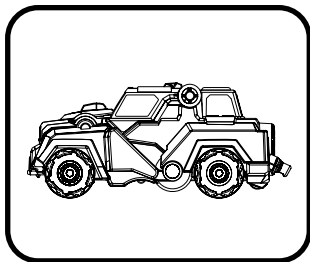

4. Vehicle mode.

 SWITCHING FROM VEHICLE TO DINO

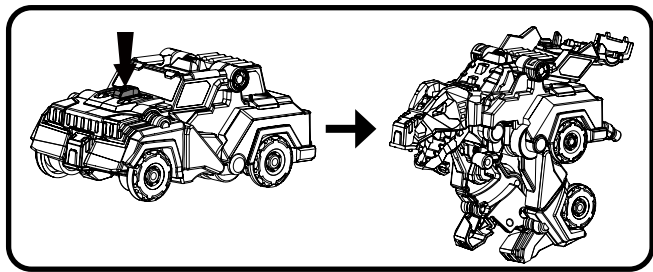

Push the **Auto Switch Button** to switch automatically from Vehicle to Dino mode.

Note: For optimal auto switching from Vehicle to Dino mode, please ensure that the exhaust pipes have been pushed into the vehicle body until you hear a clicking sound.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit is not working properly, install a new battery.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the battery.
3. Let the unit stand for a few minutes, then replace the battery.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, insert a new battery.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

***Visit our website for more
information about our products,
downloads, resources and more.***

www.vtech.co.uk
www.vtech.com.au

