

nickelodeon



Instruction Manual

STORYTIME WITH MARSHALL



© 2024 Spin Master PAW Productions Inc. All Rights Reserved. PAW Patrol and all related titles, logos and characters are trademarks of Spin Master Ltd. Nickelodeon and all related titles and logos are trademarks of Viacom International Inc.

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



4-10 years



I need...

...challenging activities that can keep pace with my growing mind


...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **PAW Patrol Storytime With Marshall** storyteller! Get ready for ruff-ruff rescues around Adventure Bay starring Marshall, Chase, Skye and Rubble.

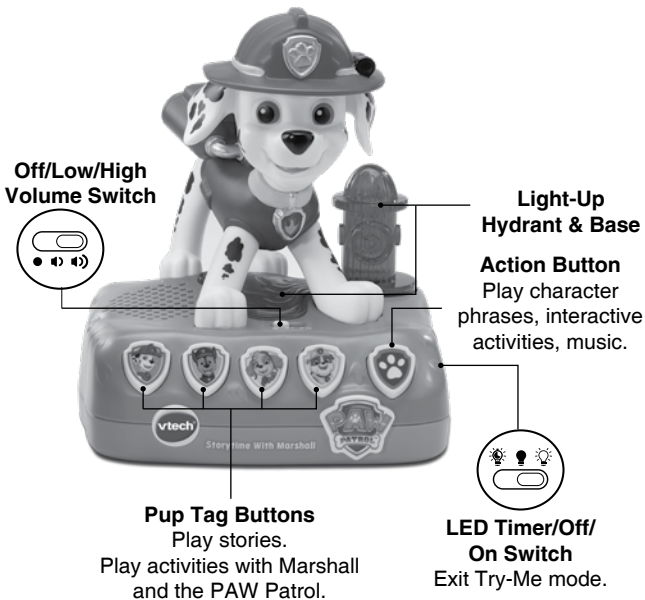

INCLUDED IN THE PACKAGE

- PAW Patrol Storytime With Marshall
- Quick Start Guide


WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

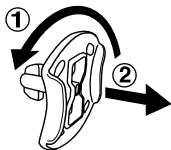

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation


1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box.

(For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).

5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

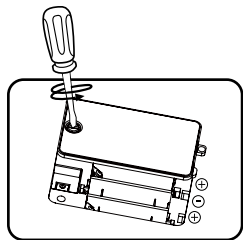

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product




The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly. In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

ACTIVATE NORMAL PLAY MODE

This product is in Try-Me mode in the packaging.
To activate normal play mode:

1. Slide the **Off/Low/High Volume Switch** from **Off** ● to **Low** 🗣️ or **High** 🗣️🗣️).
2. Slide the **LED Switch** from **On** 💡 to **Off** 💡 or **Timer** ⚡💡. Marshall will bark when normal play mode is activated. Slide the **LED Switch** back to **On** ⚡💡 for best performance.



PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On** or to adjust the volume, set the switch to **Low** 🗣️ or **High** 🗣️🗣️). To turn the unit **Off**, set the switch to **Off** ●.



2. LED Timer/Off/On Switch

Set the switch to **On** ⚡💡 to play the LED effects, or **Off** 💡 to turn the LEDs off. Set the switch to **Timer** ⚡💡 for 10 minutes of soft lights and stories that shut off automatically.



Note: The Timer cannot be used to limit play time. Pressing any button will reset the 10-minute countdown.

3. Pup Tag Buttons

Press one of the **Pup Tag Buttons** to play a story. Press it again to pause. **Pup Tag Buttons** are also used to play interactive activities with Marshall and the PAW Patrol.



4. Action Button




Press the **Action Button** to hear character phrases, music, or play interactive activities with Marshall and the PAW Patrol.



5. Light-up Hydrant and Base

If the lights in the hydrant and base are off during play, check the **LED Timer/Off/On Switch**.

6. Automatic Shut Off

To preserve battery life, the **PAW Patrol Storytime With Marshall** will automatically switch itself off after approximately 60 seconds without input when the **LED Timer/Off/On Switch** is set to **On**  or **Off** . When the switch is set to **Timer** , the storyteller will shut off after approximately 10 minutes without input. The unit can be turned on again by pressing any button.

7. Low Battery Warning

When the batteries are low, the LED in the hydrant will flash 3 times and the storyteller will announce “Low Battery.” The storyteller will then shut off automatically. See page 4 for Battery Removal and Installation instructions.

ACTIVITIES

Listen to a Story

Press a **Pup Tag Button** to play a story. Press it again to pause the story.

Stories

1. Pups Leave Marshall Alone
2. A Pup in Sheep's Clothing
3. Pups Save a Flying Frog
4. Pups and the Beanstalk

Play with Marshall and the Paw Patrol

Press the **Action Button** to listen to character phrases, music or play interactive activities with Marshall and the PAW Patrol. The **Action Button** responses play at random, so each press is a surprise!

There are 10 interactive activities to discover and play. Press the **Pup Tag Buttons** when listeners are invited to play along. Choose a pup to respond to 5 rescue missions. Get up and move in a dance game inspired by Pup Pup Boogie, or try a playful calming mindfulness exercise. Kids are challenged to listen closely to a pattern and anticipate the next pup in the sequence. Two make-believe prompts encourage kids to use their imaginations to play like the PAW Patrol.

Music

1. Intro Song
2. Fire Dog
3. Pup Pup Boogie Inspired
4. Action Melody 1
5. Action Melody 2
6. Action Melody 3

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit is not working properly, install a new battery.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

***Visit our website for more
information about our products,
downloads, resources and more.***

***www.vtech.co.uk
www.vtech.com.au***

