

vtech[®]
baby

Instruction Manual

Moosical Activities Ball Pit



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Have lots of fun with the **Moosical Activities Ball Pit** by **VTech®!** Soft and cuddly, this cute buddy comes with an apple mirror, textured carrot, detachable piano and 30 colourful balls that can be neatly stored inside Cow's head. It's a fantastic playtime experience that will grow with little ones.



Cow Ball Pit

Off/Low/
High
Volume
Control
Switch



Mode Switch

Electronic
Moosical
Piano

30 Multicoloured
Balls



Apple Mirror
Textured Carrot

INCLUDED IN THE PACKAGE

- Moosical Activities Ball Pit
- 30 Multicoloured Balls
- Electronic Moosical Piano
- Apple Mirror
- Textured Carrot
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

WARNING:

Remove product from the infant carrier when the vehicle is moving.

 
WARNING:

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove the old battery by pulling up on one end of the battery.
4. Install 2 new AA (AM-3/LR6) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

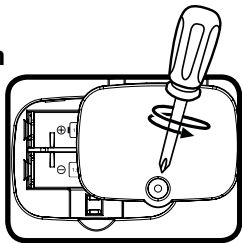

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled. Learn more at:



www.vtech.co.uk/recycle

www.vtech.com.au/sustainability


* Visit www.recyclenow.com to see a list of collection points near you.

ASSEMBLY INSTRUCTIONS

  1. Attach the C-ring's to the fabric loops on both sides of the cow.

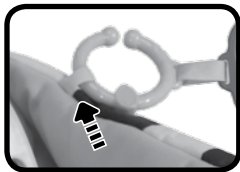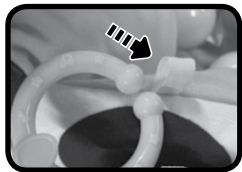

 2. Insert the fabric loops into the holes on the back of the piano then secure using the velcro.

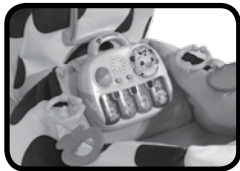





3. Put the balls into the ball pit.



PRODUCT FEATURES

1. Off/Low/High Volume Control Switch

To turn the unit **On**, slide the **Off/Low/Volume Switch** to the Low volume  or the High Volume  position. You will hear a sound, a phrases and a song. To turn the unit **Off** , slide the **Off/Low/Volume Switch** to the **Off**  position.



2. Mode Switch

Slide the **Mode Switch** to **Music Mode**, **Animal Mode** or **Learning Mode** position.



3. Automatic Shut Off

To preserve battery life, the **Electronic Moosical Piano** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

NOTE

If the piano powers down or if the light fades out during play, please install a new set of batteries.

IMPORTANT NOTE

Please remove the plastic film from the mirror and discard before use.

ACTIVITIES

1. Light Up Piano Buttons

Music Mode - Press the Piano Buttons to hear fun sounds, sing-along songs and melodies.

Animal Mode - learn about animals and their sounds.

Learning Mode - learn numbers, counting, colours and play question and answer games. The lights will flash with the sounds.



2. Ball pit play

Have a blast with the 30 included multicoloured balls. Grab, squeeze and throw them around to support motor skills, then tidy up and store the balls inside the Cow's head.



3. Exploring Play

Playing with the apple mirror, textured carrot and electronic piano support important developmental milestones. Explore textures by playing with the squeaky horns, crinkly ears and soft body.



SONG LYRICS

Song 1

Won't you come and play with us,
Duck, pig, sheep and cow,
Let's have fun all day long!

Song 2

The cow on the farm says moo-moo-moo,
moo-moo-moo, moo-moo-moo.
The cow on the farm says moo-moo-moo,
all day long.

Song 3

Jumping here to sing a song,
Jumping there to sing along.
The pig likes to play in muddy puddles,
Rolling rolling oink oink oink.

Song 4

Swim, swim, swim along,
Up and down the stream.
Quack quack here and quack quack there,
I like to quack, quack, quack!

Song 5

Mary had a little lamb,
little lamb, little lamb.
Mary had a little lamb,
whose fleece was white as snow.

MELODIES

1. Alphabet Song
2. A-Tisket A-Tasket
3. Bingo
4. Entertainer
5. Girls and Boys Come Out to Play
6. Hey Diddle Diddle
7. Hot Cross Buns
8. Looby Loo
9. Mulberry Bush
10. Old MacDonald
11. One, Two, Buckle My Shoe
12. Teddy Bears' Picnic

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

