


vtech®

Instruction Manual

# SWITCH & GO® DINOS

*HERO THE TRICERATOPS*

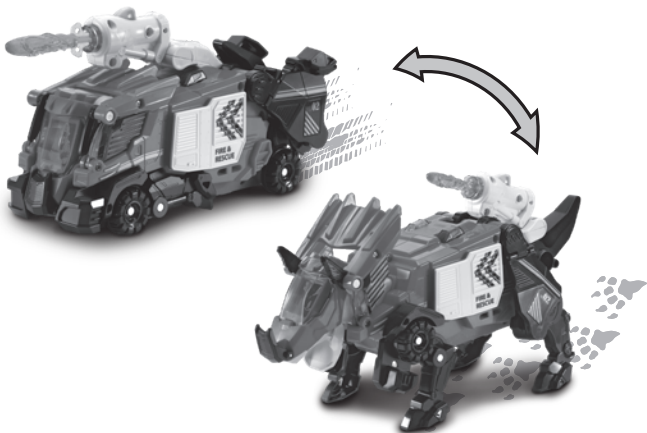

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


**4-10 years**



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Switch into fun with **Switch & Go Dinos® Hero the Triceratops!** Switch this mighty Fire Engine into a tough Triceratops and back in just a few simple steps! Launch the Water Burst and release the Rescue Motorcycle to save the day! Let's go!

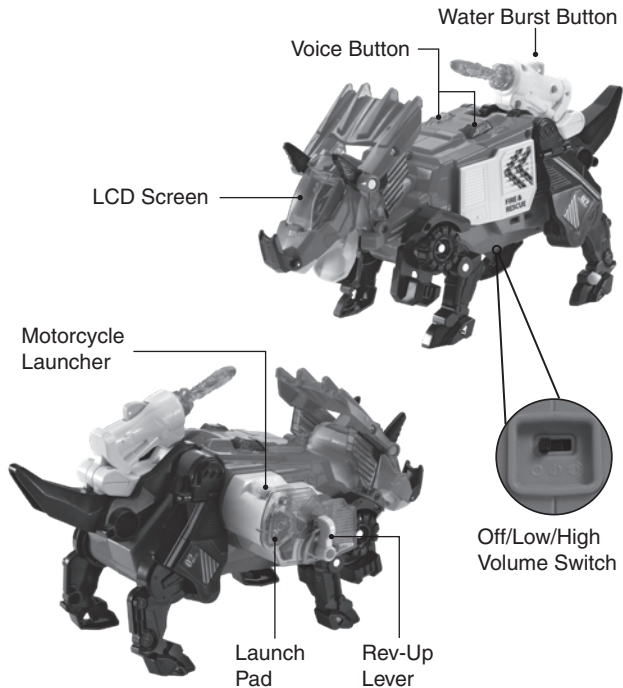

# INCLUDED IN THE PACKAGE

- **Switch & Go Dinos® Hero the Triceratops**
- Quick Start Guide

## **WARNING**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## **NOTE**

Please save this Instruction Manual as it contains important information.

## **WARNING**

Do not aim at eyes or face. Do not discharge any object other than the projectile provided with this toy.

## **NOTE**

Please remove all the cable ties before playing with this toy.


# GETTING STARTED

## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

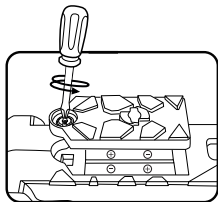

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

# PRODUCT FEATURES

## 1. Off/Low/High Volume Switch

To turn the unit **On** or to adjust the volume, slide the **Off/Low/High Volume Switch** to the Low (▶) or High volume (◀▶) position. To turn the unit **Off**, slide the switch to the Off (○) position.



## 2. Voice Button

Press the **Voice Button** to hear fun phrases and cool dinosaur sounds in Dino mode. In Vehicle mode, press the **Voice Button** to hear fun phrases and cool fire engine sounds.




## 3. Water Burst Button

Insert the Water Burst into the Water Launcher, the light in the Water Launcher will activate, then press the **Water Burst Button** to launch the Water Burst.



## 4. Rescue Motorcycle

Pull out the Launch Pad, and then rev the **Rev-Up Lever** several times. Then, press the Motorcycle Launcher lever to launch the Rescue Motorcycle.

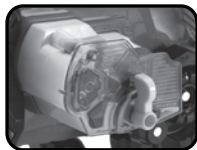

## 5. LCD Screen


The LCD Screen displays dino eye animations in Dino mode and shows driver animations in Vehicle mode.





## 6. LED Lights

The LED lights flash along with the sounds in Dino mode and Vehicle mode.

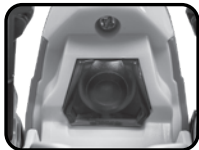


## 7. AUTOMATIC SHUT-OFF

To preserve battery life, **Hero the Triceratops** will automatically shut off after approximately 20 seconds without input. The unit can be turned on again by pressing the **Voice Button** or by switching between Dino and Vehicle modes.


### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.


## HOW TO SWITCH

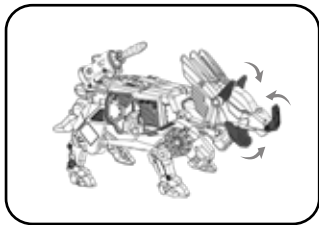


1. Begin in Dino mode. Flip the horns and close the jaw.

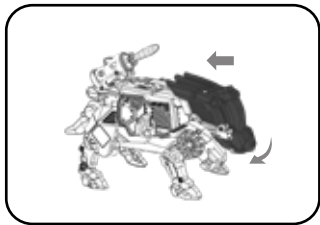


2. Rotate the crest down and then push the head in.

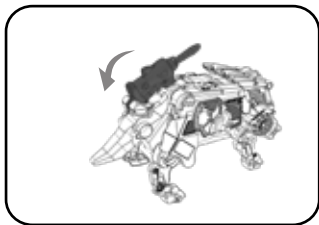


3. Adjust the water launcher backwards.

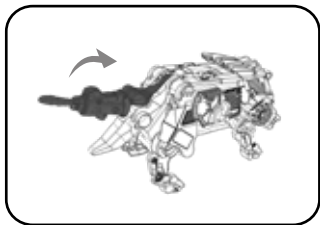


4. Aim the water launcher forwards.

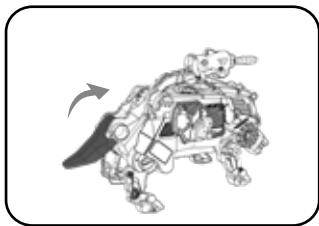


5. Flip up the tail.

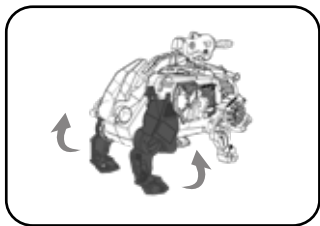


6. Flip out the rear legs.

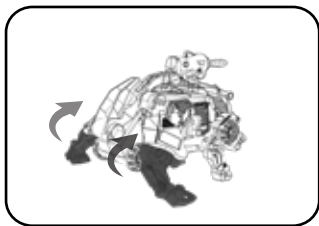


7. Flip the rear legs up.

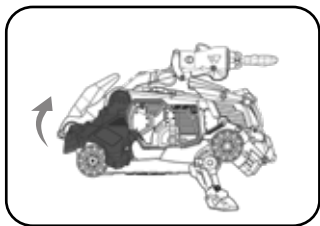


8. Rotate the lower legs up.

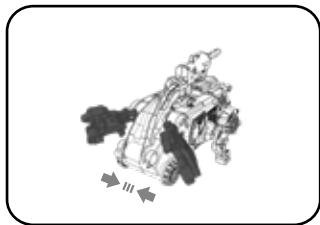


9. Rotate the lower legs.

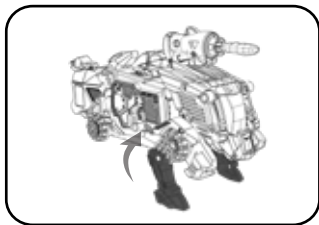


10. Flip the front legs up.

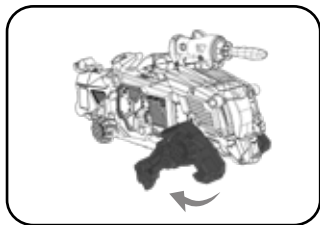


11. Rotate each front leg and shoulder.

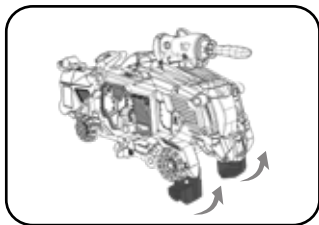

12. Flip the front bumpers out.

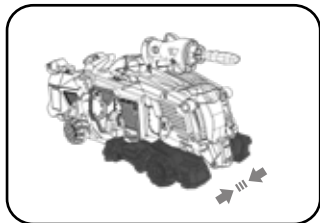

13. Push the front bumpers and wheels in.

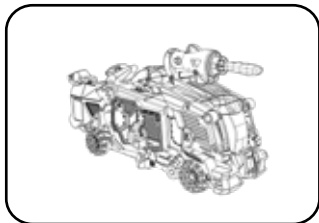

14. The unit is now in Vehicle mode.

To switch back to Dino mode, reverse the steps above.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a brand new set of batteries.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***  
***[www.vtech.com.au](http://www.vtech.com.au)***

