

vtech[®]

Instruction Manual

Mix It Up DJ



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Mix It Up DJ!** Get in the DJ booth and create your own custom music mixes! Press the light up buttons to choose instruments or characters, then jam to mix new music with sounds, sing-along songs and melodies!



- | | |
|-------------------------------|-----------------------------|
| ① Back-lit Screen | ⑧ Nine Light Up Buttons |
| ② Stop Button | ⑨ Power Button |
| ③ Record/Play Button | ⑩ Four Mode Buttons |
| ④ Two Volume Buttons | ⑪ OK Button |
| ⑤ Two Tempo Buttons | ⑫ DJ Phrase Button |
| ⑥ Light Up Disc | ⑬ Three Music Style Buttons |
| ⑦ Settings Button at the back | ⑭ Eight Piano Keys |

INCLUDED IN THE PACKAGE

- Mix It Up DJ
- Quick Start Guide


WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

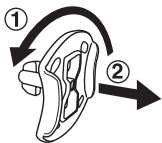

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

⚠ NOTE

This product is in Try-Me mode in the packaging. Turn on the **Mix It Up DJ**, then press the **Settings Button** at the back. You will hear 3 short beeps and the unit will restart. **Mix It Up DJ** is now ready for Normal Play! If the **Mix It Up DJ** powers down during play, please install a brand new set of batteries.




WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

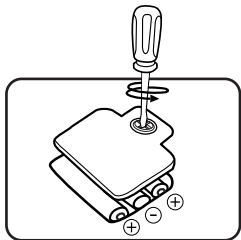

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Power Button

Press the **Power Button** to power **On** the unit. Press the button again to power **Off** the unit.



2. Four Mode Buttons

Press one of the **Mode Buttons** to change mode.



3. Eight Piano Keys

Press the **Piano Keys** to hear music notes in Mix mode, Create mode and Trio mode. Use the piano keys to repeat the rhythm patterns in Learn mode.



4. Light Up Disc

Spin the **Light Up Disc** back and forth to add sound effects to your music. The lights will also flash with music and sounds.



5. Nine Light Up Buttons

Press the **Light Up Buttons** to choose the instruments or characters. After a **Light Up Button** is pressed, it will illuminate.



6. Three Music Style Buttons

Press one of the **Music Style Buttons** to change the music style in Mix mode, Create mode and Trio mode. Press the same **Music Style Button** again to change to another music track in the same style. There are 3 music styles: Hip-Hop, Chill Out and Dance.



7. Stop Button

Press the **Stop Button** to stop the music in Mix mode and Create mode.



8. Record/Play Button

Press the **Record/Play Button** to start recording in Mix mode and Create mode. The system will record the sound from the **Light Up Disc, Piano Keys, DJ Phrase Button**



and tempo changes. When you finish the recording, press the **OK Button** to save your mix. The recording will also end automatically after 2 minutes. After recording, press the **Record/Play Button** to enter the Record/Play menu, then spin the **Light Up Disc** to select **Play**, followed by pressing the **OK Button** to playback your mix.

Note: When recording a new mix, your previous recording will be overwritten.

9. Two Volume Buttons

Press the **Volume Buttons** to adjust the overall volume.



10. Two Tempo Buttons

In Mix mode and Create mode, press the **Tempo Buttons** to adjust the tempo of the built-in songs and melodies.



11. DJ Phrase Button

Press the **DJ Phrase Button** to add DJ phrases into the music.



12. OK Button

Press the **OK Button** to confirm the selection when in the Record/Play menu or in the Settings menu.



13. Settings Button

When starting the **Mix It Up DJ** for the first time, press the **Settings Button** to exit Try-me mode.

Then, press the **Settings Button** during normal play to enter the

Settings menu. From here you can choose if you'd like the disc light ON/OFF, or to adjust the screen contrast. Spin the **Light Up Disc** to make a selection and then press the **OK Button** to confirm.



14. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically shut off after several minutes without input. The unit can be turned on again by pressing the **Power Button**. The unit will also automatically turn off when battery power is very low.

Note: If the **Mix It Up DJ** powers down repeatedly, please install a brand new set of batteries.

Modes

1. Mix Mode



Create your own unique music combinations. Press the **Light Up Buttons** and mix up to four tracks into the music. Press the **Piano Keys, DJ Phrase Button**, or spin the **Light Up Disc** to jam fun sounds. You can also press the three **Music Style Buttons** to choose different songs. Press the same **Music Style Button** again to change to another music track in the same style.

2. Create Mode



Create a melody using any instrument sound you'd like. Press one of the **Light Up Buttons** to select the sound for the **Piano Keys** and the **Light Up Disc**. Press the **DJ Phrase Button** to jam fun sounds. You can also press the three **Music Style Buttons** to choose backing music. Press the same **Music Style Button** again to change to another music track in the same style, and press the **Tempo Buttons** to adjust the backing music tempo.

3. Trio Mode



Form your own Trio! Press the **Light Up Buttons** to select instruments or characters to perform in a trio. The newly chosen instrument/character will replace the oldest one. Press the **Piano Keys, DJ Phrase Button**, or spin the **Light Up Disc** to jam fun sounds. You can also press the three **Music Style Buttons** to choose different melodies. Press the same **Music Style Button** again to change to another music track in the same style.

4. Learn Mode



See how well you can repeat rhythm patterns. Press one of the **Light Up Buttons** to select a theme. A rhythm pattern will then play for you to repeat. To repeat the rhythm pattern, press any **Piano Key** in rhythm with the pattern you just heard. When asked to turn the disc, spin the **Light Up Disc**. Repeat a rhythm pattern with 50% or more notes correct to master the pattern. Master 4 or more patterns to win the game.

SONG LYRICS:

Hip-hop

Song 1

The rhythm will move us.
The beat will groove us.
As we sing our song.
As we sing our song.
The rhythm will move us.
The beat will groove us.
As we sing our song.
As we sing our song.

Song 2

One, two, three,
C'mon and move with me!
Four, five, six,
Scratch that disc and mix!
Seven, eight, nine and ten!
Let's play that song again!

Song 3

A - B - C - D - E - F - G,
H - I - J - K - L-M-N-O-P,
Q - R - S,
T - U - V,
W - X,
Y and Z!

Now I know my A - B - Cs!

Next time won't you sing with me? (Yeah! Ready?)

Chill

Song 1

You are special,
Like a snowflake!
One of a kind,
Special in your way!
Like no one else, just be yourself!
And let your light shine through!

Song 2

R, Red, I'm chilling on my bed,
G, Green, I'm a rhythm machine,
B, Blue, Now I'm feeling the groove,
Headphones on, just the music and me!

Song 3

Hey diddle diddle,
The cat in the fiddle,
The cow jumped over the moon,
The little dog laughed to see such fun,
And the dish ran away with the spoon!

Dance

Song 1

We love the music,
And let it move us, (Move your body!)
As we run and play!
As we run and play! (3, 2, 1, go!)
We love the music,
And let it move us, (Hey! Yeah!)
As we run and play!
As we run and play! (3, 2, 1, yeah!)

Song 2

Hickory, dickory, dock!
The mouse ran up the clock!
The clock struck one,
The mouse ran down,
Hickory, dickory, dock!

Song 3

Let's clap our hands,
And dance with our friends!
We'll rock to the beat,
And move our feet!
Hop! Hop! Hop! Move!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a brand new set of batteries.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

