

DREAMWORKS
**GABBY'S
DOLLHOUSE**



Instruction Manual

Story Tails With Gabby



DreamWorks Gabby's Dollhouse
© DreamWorks Animation LLC.
All rights reserved.

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

 
I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

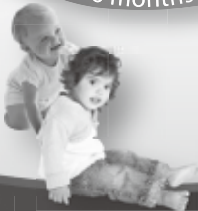

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **Gabby's Dollhouse Story Tails With Gabby** storyteller! Join Gabby and Pillow Cat as they narrate four a-meow-zing adventures that fans will recognise from the hit show, *Gabby's Dollhouse*.



INCLUDED IN THIS PACKAGE

- Gabby's Dollhouse Story Tails With Gabby storyteller
- Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

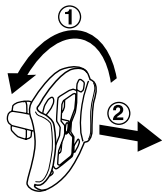

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

INSTRUCTION

 
WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.

3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

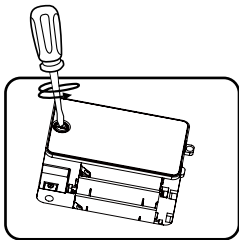

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

ACTIVATE NORMAL PLAY MODE

This product is in Try-Me mode in the packaging.

To activate normal play mode:

1. Slide the **Off/Low/High Volume Switch** from **Off** ● to **Low** 🗣️ or **High** 🗣️).
2. Slide the **LED Switch** from **On** 💡 to **Off** 🚫💡 or **Timer** ⌚💡. The Gabby Cats will meow when normal play mode is activated. Slide the **LED Switch** back to **On** 💡 for best performance.



PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On** or to adjust the volume, set the switch to **Low** 🗣️ or **High** 🗣️). To turn the unit **Off**, set the switch to **Off** ●.



2. LED Timer/Off/On Switch

Set the switch to **On** 💡 to play the LED effects, or **Off** 🚫💡 to turn the LEDs off. Set the switch to **Timer** ⌚💡 for 10 minutes of soft lights and stories that shut off automatically.



Note:

The Timer cannot be used to limit play time. Pressing any button will reset the 10-minute countdown.

3. Peek-a-Boo Kitty Buttons

Press one of the **Peek-a-Boo Kitty Buttons** to play a story. Press it again to pause. **Peek-a-Boo Kitty Buttons** are also used to play activities with Gabby and Pillow Cat.



4. Action Button




Press the **Action Button** to hear character phrases, music, the Gabby Cat of the Day, or play activities with Gabby and Pillow Cat.



5. Light up Pillow Cat and Base

If the lights in Pillow Cat and the base are off during play, check the **LED Timer/Off/On Switch**.

6. Automatic Shut Off

To preserve battery life, the **Gabby's Dollhouse Story Tails With Gabby** storyteller will automatically shut off after approximately 60 seconds without input when the **LED Timer/Off/On Switch** is set to **On**  / **Off** . When the switch is set to **Timer**  the storyteller will shut off after approximately 10 minutes without input. The unit can be turned on again by pressing any button.

7. Low Battery Warning

When the batteries are low, the LED in Pillow Cat's face will flash 3 times and the storyteller will announce "Low Battery." The storyteller will then shut off automatically. See page 4 for Battery Removal and Installation instructions.

ACTIVITIES

Listen to a story

Press a **Peek-a-Boo Kitty Button** to play a story. Press it again to pause the story.

Stories

1. It's Purrsday
2. Gabby, I Shrank the Kitties
3. Planes, Trains and Kitty Balloons
4. Storytime!

Play with Gabby and Pillow Cat

Press the **Action Button** to listen to character phrases, music, Gabby Cat of the Day, or play interactive activities with Gabby and Pillow Cat. The **Action Button** responses play at random, so each press is a surprise!

There are 9 interactive activities to discover and play. Press the **Peek-a-Boo Kitty Buttons** when Gabby invites listeners to play along. Play 4 games, get up and move or take a few calming breaths, laugh at Gabby's jokes, learn silly tongue twisters and learn ways to comfort a friend who needs support in a stressful situation.

Music

1. Gabby Inspired
2. Pillow Cat Inspired
3. Cakey Cat Inspired
4. DJ Catnip Inspired
5. Kitty Fairy Inspired
6. MerCat Inspired

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

TROUBLESHOOTING

If for some reason the program/activity stops or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play with again.
5. If the product still does not work, please install a brand new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk



TM & © 2024 VTech Holdings Limited.
All rights reserved.
IM-619800-000
Version: 0