

vtech[®]

 
 
Instruction Manual

Tasty Treats Axolotl



INTRODUCTION

Thank you for purchasing **Tasty Treats Axolotl**. Pet, feed and interact with Axolotl to hear his fun reactions to 8 different snack pieces. Watch him react to different snacks, flavours and sensations with fun phrases, songs, sound effects and colour-changing lights.

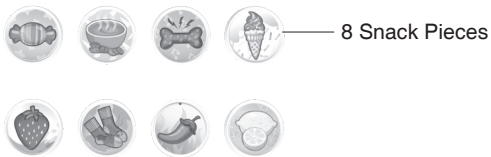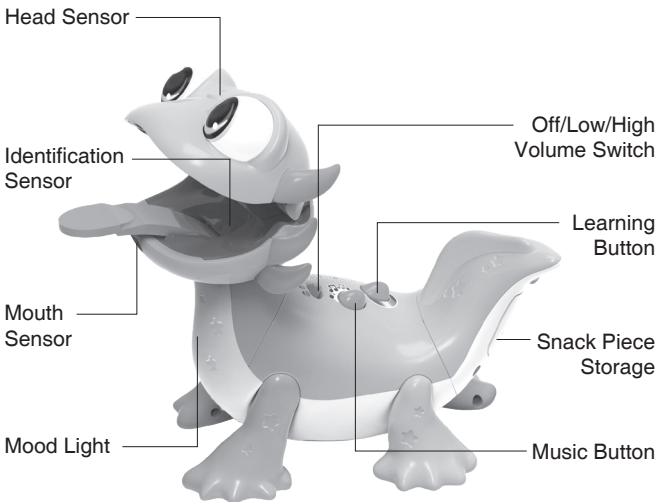

INCLUDED IN THE PACKAGE

- Tasty Treats Axolotl
- 8 Snack Pieces
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

WARNING:

This toy produces flashes that may trigger epilepsy in sensitised individuals.

 
Warning! Not suitable for children under 36 months. Small parts. Choking hazard.

NOTE

Please cut and discard the cords before playing with the unit. The cords are not part of the product and should be discarded for your child's safety.



Unlock the packaging locks:

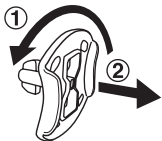

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out and discard the packaging locks.

ACTIVATING NORMAL PLAY MODE

 
The first time the **Tasty Treats Axolotl** is used, you will need to exit **Try-Me** mode and activate **Normal Play** mode.

1. Slide the **Off/Low/High Volume Switch** to turn the unit **On**.
2. Then feed the Axolotl any snack piece that is not the green pepper. You will hear three beep sounds to indicate that the **Normal Play** mode is activated.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located at the bottom of Axolotl and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 AA (AM-3/LR6) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

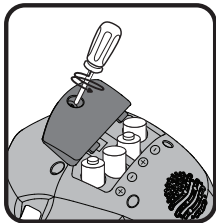

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.

- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

Slide the **Off/Low/High Volume Switch** to turn **ON** the unit and choose low or high volume.



2. Head Sensor

Touch Axolotl's head as shown in the picture to hear different fun sounds.



3. Learning Button

Press the **Learning Button** to hear interactive phrases about colours and various snacks.



4. Music Button

Press the **Music Button** to hear Axolotl sing fun songs.



5. Mouth Sensor

The **Mouth Sensor** is located on Axolotl's chin directly under his mouth. Hold your hand or a snack piece in front of the sensor and Axolotl will open his mouth.



6. 8 Snack Pieces

When Axolotl's mouth opens, place a snack piece directly on his tongue to watch him react.

Note: Only feed Axolotl the **8 Snack Pieces** provided with this toy (Do not insert other items into Axolotl's mouth).



7. Identification Sensor

The sensor will identify the **Snack Piece** once it is inside Axolotl's mouth. He will react and tell you how he feels.



 
8. Snack Piece Storage

Open the storage door at the base of Axolotl's tail and place the **SNACK PIECES** into the compartment.




9. How to open and close the storage door

To open, pull the locking tab up (the door will then fall open).

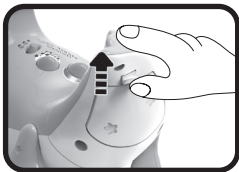

 To close, align the door in the slot and press firmly. You will hear a “click” sound to confirm the door is secure.

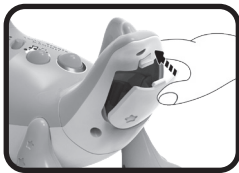

10. Mood Light

The **Mood Light** will change colours when Axolotl is talking or singing. It will also reflect his mood when Axolotl is eating.



11. Automatic Shut-Off

To preserve battery life, the **Tasty Treats Axolotl** will shut **OFF** automatically after several minutes without input. The unit can be turned **ON** again by sliding the **Off/Low/High Volume Switch**. Axolotl’s belly will flash red three times and then automatically turn **OFF** when the batteries are very low.

Note:

1. Do not force Axolotl’s mouth open or closed with your hands.
2. Do not grab Axolotl’s tongue.
3. Do not put Axolotl under water.
4. Do not put fingers in Axolotl’s mouth.

ACTIVITIES

1. Press the **Learning Button** to learn colour facts or hear Axolotl talk about snacks.
2. Press the **Music Button** to hear Axolotl sing and to watch his light change colour.
3. Touch Axolotl's head to comfort him and show his affection. When Axolotl is singing, touch his head and you will hear fun sounds jammed in the song.
4. Choose from **8 Snack Pieces** to feed Axolotl and watch him react. If he is full, he will hiccup. If you feed him too many snack pieces he doesn't like, watch out, he might fart!

SONG LYRICS

Song 1

My gills are really cool,
and people love my smiling face.
They help me breathe in water,
as I move from place to place.

Song 2

Sour and spicy,
cold and sweet.
So many things to try,
so many things to eat.

Song 3

I am a walking fish.
Axolotl is my name.
I swim or walk on land!
Would you like to play a game?

Song 4

I love food and I am hungry.
I am ready for a snack.
Bleah!
What is that you fed me?
You better take it back!

Song 5

Sleeping, playing, hiding,
I come out at night.
My home is in the rocks,
hiding from the light.

Song 6

I love all the colours in my yummy food.
Red strawberries, yellow lemons.
Pink ice cream is tasty too.

HUMMED MELODIES

1. Spring (*Lento Rendition*) - Vivaldi
2. Bingo
3. Alouette
4. The Entertainer - Scott Joplin

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be used for an extended period of time.
4. Do not drop the unit on hard surfaces or expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of new batteries.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5601 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 13.553MHz – 13.567MHz

Maximum RF power: -50 dBm

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5601 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 13.553MHz – 13.567MHz

Maximum RF power: -50 dBm

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

