

Instruction Manual

My 1st Record Player



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

```
To learn more about this and other VTech® products, visit www.vtech.co.uk
```

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

l am...

...responding to colours, sounds and textures


...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

INTRODUCTION

Thank you for purchasing the **My 1st Record Player**! Drop on a record and get ready to groove to the tunes! This retro inspired record player features five double-sided records showcasing jazz, techno, country, pop, and hip hop songs and music. Dance with the kitty, slide the paw clicker and play music while you bop to the beats.

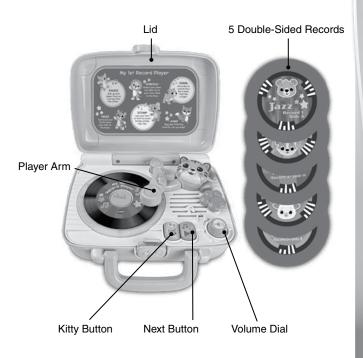

INCLUDED IN THE PACKAGE

- My 1st Record Player
- 5 Double-Sided Records
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

NOTE

This product is in Try-Me mode in the packaging. After opening the package, please turn the **My 1st Record Player** off then on again to proceed with normal play.

Unlock the Packaging Locks



- Rotate the packaging lock 90 degrees anticlockwise.
- 2 Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- Locate the battery cover on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover
- 3. Remove old batteries by pulling up on one end of each battery.



- Install 3 AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
- 5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

 
PRODUCT FEATURES

 
1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** located on the back of the unit to the **On ()** position. You will hear a short tune, a cute phrase and sounds. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** ● position.

2. Volume Dial

Turn the **Volume Dial** to adjust the volume to the desired level.





3. Storage Compartment

When you have finished using the record player, we recommend storing the records in the **Storage Compartment** on the back of the record player to prevent the records from getting lost.



4. Automatic Shut-Off

To preserve battery life, the **My 1st Record Player** will automatically power down after approximately 70 seconds without input. The unit can be turned on again by pressing any button, opening the **Lid** or moving the **Player Arm**.

NOTE

If the unit powers down, the light fades out, or the turntable slows or stops turning during play, please install a new set of batteries.

ACTIVITIES

1. Turntable

Place a **Record** on the **Turntable**, then slide the **Player Arm** over the record to activate it and hear it play. A sung song or a phrase and melody will play on Side A. Animal sounds, a phrase and melodies will play on Side B. The lights will flash with the sounds and the kitty will sway to the music.



2. Kitty Button

Press the **Kitty Button** when a record is activated on the turntable to hear the pictured animal identified. If there is no record on the turntable or the record is not activated, the kitty will say fun phrases. The lights will flash with the sounds.



3. Next Button

Press the **Next Button** when a record is activated on the turntable to play the next phrase, song, short tune or melody. If there is no record on the turntable or the record is not activated you will hear phrases to encourage play. The lights will flash with the sounds.



4. Record Player Lid

Open the **Lid** to hear a song, a phrase and a sound. Close the **Lid** to hear a short tune. The lights will flash with the sounds.



MELODIES

- 1. Where Has My Little Dog Gone?
- 2. Oh, Dear! What Can the Matter Be?
- 3. Oats, Peas, Beans and Barley Grow
- 4. Glow Worm
- 5. The Green Grass Grew All Around
- 6. Aiken Drum
- 7. Good Morning Merry Sunshine
- 8. Skip to My Lou
- 9. Jack Be Nimble

- 10. Boys and Girls Go Out to Play
- 11. A-Tisket, A-Tasket
- 12. Little Robin Redbreast
- 13. Yankee Doodle
- 14. Wheels on the Bus
- 15. Ten in the Bed
- 16. Polly Put the Kettle On
- 17. One, Two, Buckle My Shoe
- 18. Here We Go 'Round the Mulberry Bush
- 19. Old MacDonald
- 20. Chicken Reel
- 21. On Top of Old Smokey
- 22. Little Bo Peep
- 23. BINGO
- 24. Diddle, Diddle Dumpling
- 25. Hickory, Dickory Dock
- 26. Three Little Kittens
- 27. Humpty Dumpty
- 28. Do You Know the Muffin Man?
- 29. London Bridge
- 30. Row, Row, Row Your Boat

SONG LYRICS

Song 1

I'm a cool cat, I like to sing. I have pawsitively, purrfect vibes.

Song 2

Tiger's nimble, tiger's quick, Dancing in the jungle, lookin' so slick!

Song 3

Hey little lion cubs, find your groove! It's time for a jungle party, get ready to move!

Song 4

Silly foxy, little foxy fox. Dancing on the rocks, in your silly socks.

Song 5

Bear's got the moves, his paws are a-tappin'. Bear's found his groove, the rhythm's got him snapping.

Song 6

Elephant's floppy ears, Flip and flop all around. Elephant stomps her feet, Swinging her trunk up and down.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **On**. The unit should now be ready to play with again.
- 5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155 Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785 Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/ consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au



© 2024 VTech Holdings Limited. All rights reserved. IM-568100-001 Version:0