

Hello!

Welcome to the Sew & Style World! Are you ready to create your very own stylish unicorn bag? Let's start!





2 Pairs of Glitter Eyes











1 Back Lock











2 Strap Rings







 


1 Screwdriver **Button Locks**


Snap Buttons









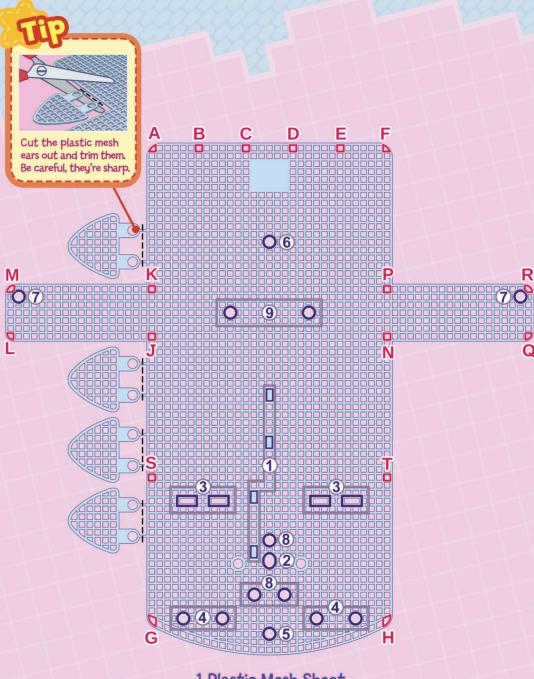

1 Plastic Mesh Sheet

Before you start, let's learn the basic techniques.

Threading the Needle



Undo the thread, cut to your required length.

Use the corner of the card as a threader to help push the thread through the needle.

Insert the thread through the eye of the needle.

Long Stitch



Insert the needle up through the top of the plastic until you are left with a 2.5cm tail of thread. Hold the



Count for 7 holes. Pull the needle down through the back of the plastic. Then thread down to the first hole on the next row. as above. Make sure the tail thread is under the main thread.



Repeat the steps until the thread is almost used up.



Thread the remaining thread inside and pull it tight. Trim it as close to the plastic as possible. Then cut some more thread and continue to sew.

Edge Stitch



Insert the needle through the top of the plastic until you are left with a 2.5cm tail of thread. Hold the tail.



Pull the thread up and insert the needle through to the back of the plastic. Make sure the tail thread is under the main thread.




 
Repeat the steps until you reach the end of the edge.




Insert the remaining close to the plastic as possible.


10

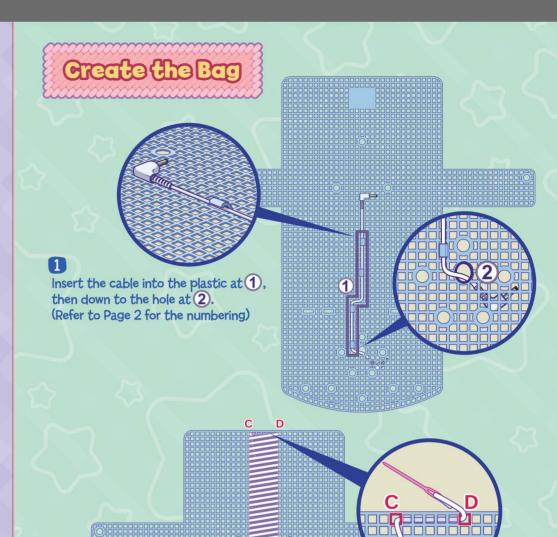





20

 


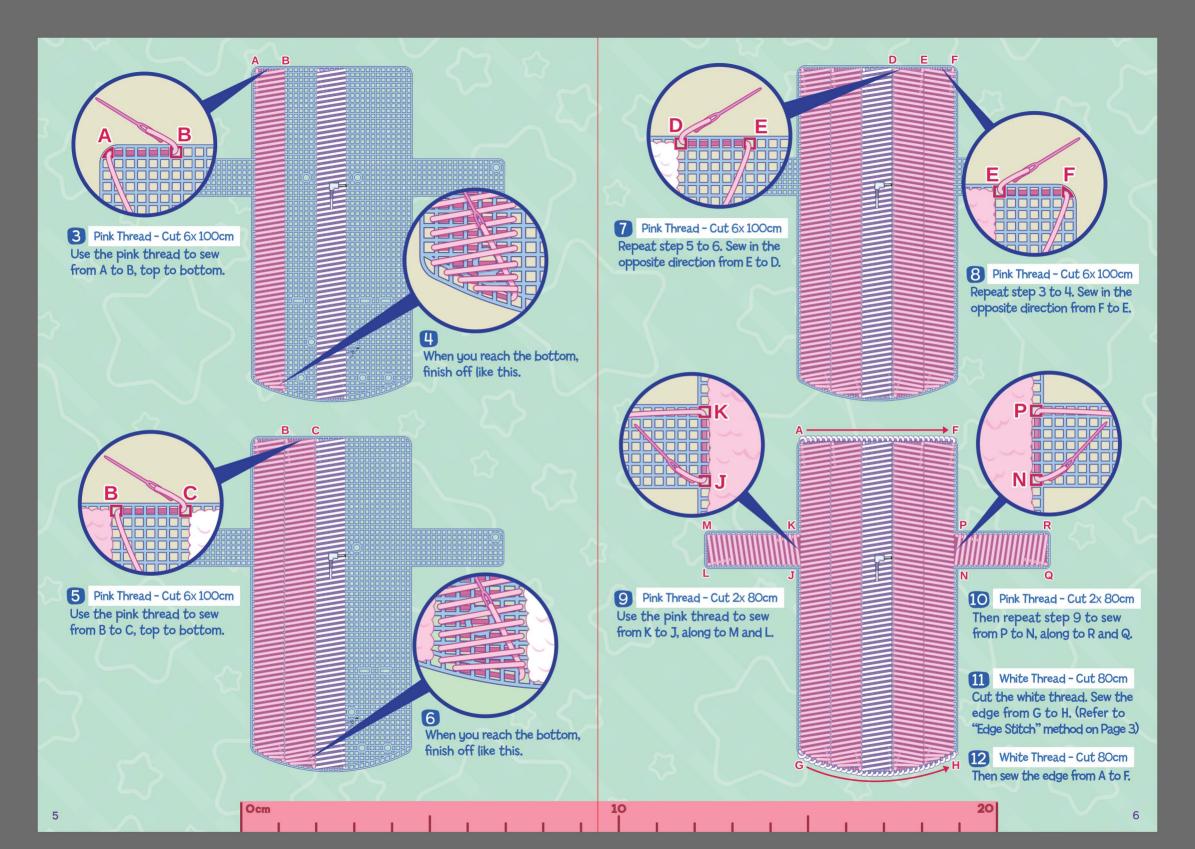

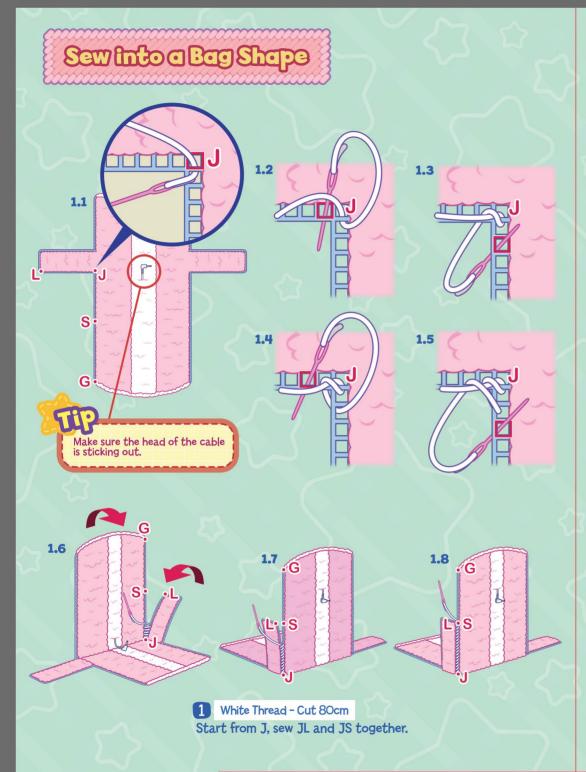


7

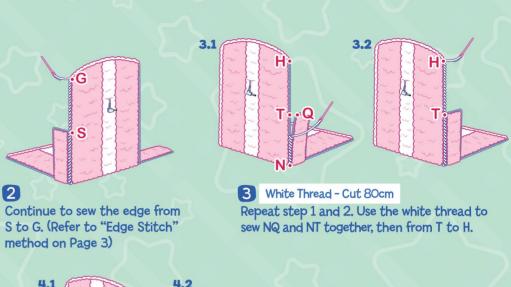


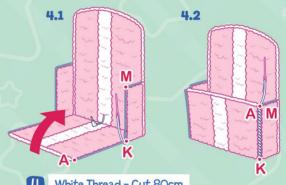



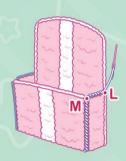



Then sew the edge from M to L. (Refer to "Edge Stitch" method on Page 3)

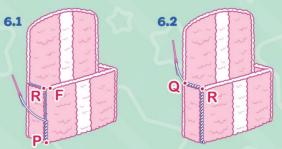




6 White Thread - Cut 80cm Use the white thread. Repeat step 4 and 5 for PF and PR, then sew the edge from R to Q.

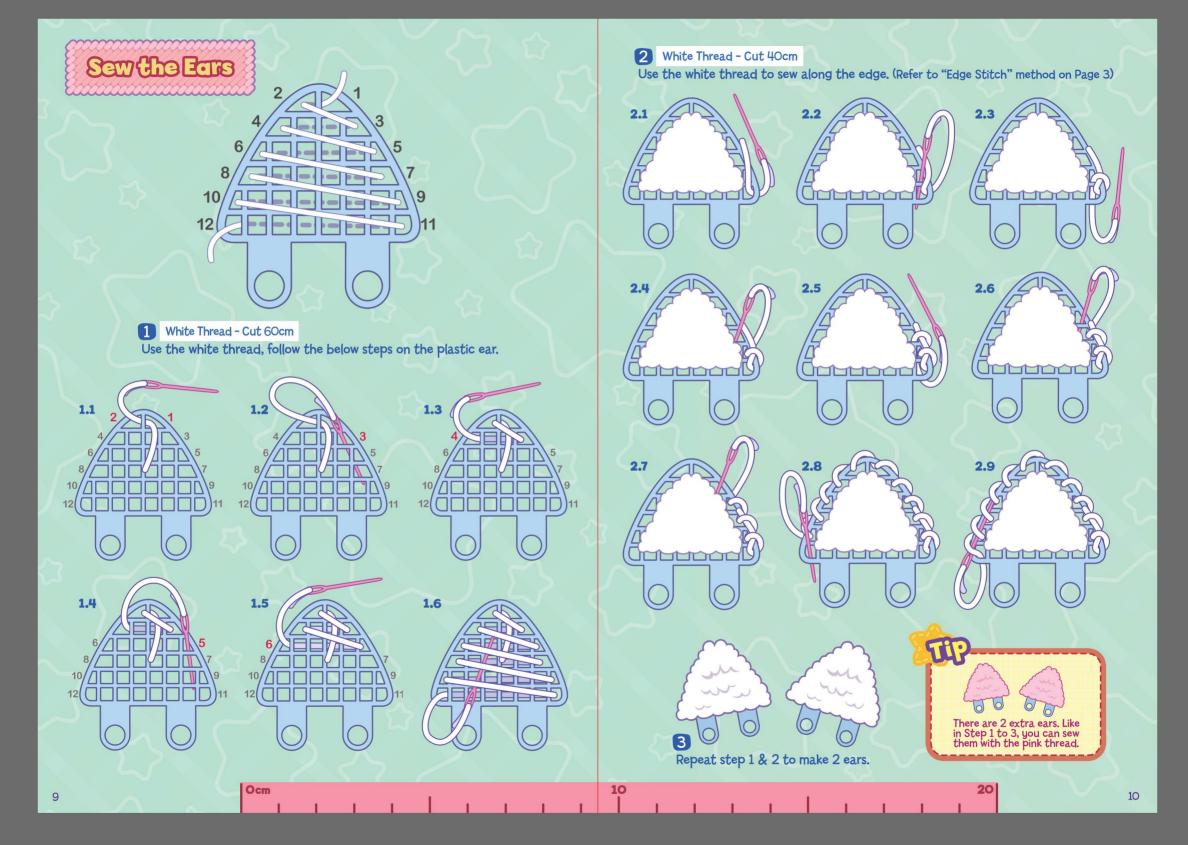

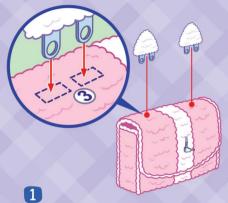

Attach the ears onto the handbag at 3. (Refer to Page 2 for the numbering)



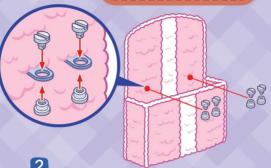


Open the flap, then plug the white button lock into the ear holes. On the other side, use the white snap buttons to secure them.



Put the eyes onto the handbag at 4. You can find L & R at the back of the eyes. L means Left and R means Right.




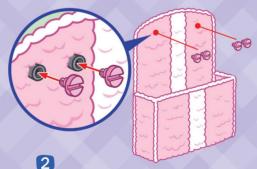


Open the flap, attach the eyes with the pink snap buttons.




Put the front snap lock on the flap of the handbag at (5).

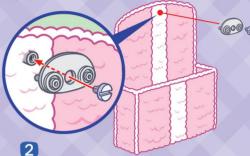

Open the flap, attach the back snap lock and secure it with a white snap button.

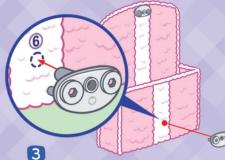

Open the handbag flap and attach the back lock at 6.

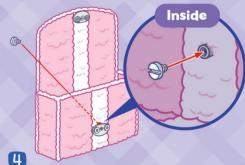

Secure it with a white snap button inside the handbag.




Attach the strap ring to the side of the handbag at 7. Secure it with a pink snap button inside the handbag.







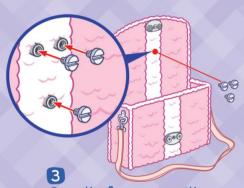

Open the flap, secure with 3 white snap buttons.











Place the battery box at the bottom of the handbag at 9.





Congratulations! Your Sew & Style Bag is ready to use!

Touch the horn to play music & light patterns! Switch ON to play.